

AVIC-HD3

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the Operation Manual and Hardware Manual provided with the product.

Hardware buttons



(1) OPEN CLOSE button

Press to access the disc loading slot. Press and hold to set the tilt of the LCD panel.

(2) V button

Press to enter the PICTURE ADJUSTMENT mode.

(3) VOL (▼/▲) button

Press to adjust the volume of Audio source.

(4) AV button

Press to switch the screen to the audio operation screen. If you press the AV button again, the audio source switches.

(5) MENU button

Press to display a navigation menu. Press and hold to display "Phone Menu" when Pioneer Bluetooth unit (sold separately) is connected.

(6) MAP button

Press to view the navigation map screen or press to switch view mode.

(7) TRK (◀/▶) button

Press when the built-in DVD drive source is selected to skip a track or a chapter. Press and hold to fast forward/fast reverse a track or a chapter.

(8) P.LIST (▼/▲) button

Switch preset channels during the Radio operation.

(9) TA/NEWS button

Press to turn the traffic announcement function on or off. Press and hold to turn the NEWS function on or off.

Switching the screen




AV screen

Navigation map

Search function overview

This navigation system has multiple methods for entering your destination.

Press the **MENU** button to display the navigation menu.

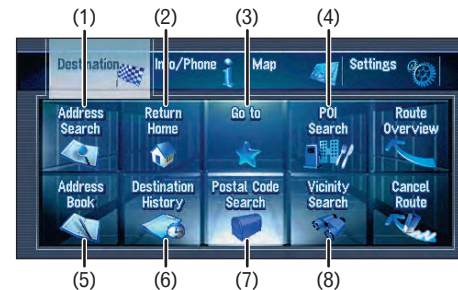

- Search by address
- Calculate a route to your home address
- Calculate a route to your favorite destination
- Search for POIs in the database
- Select a registered destination from the address book
- Select a previously routed destination
- Search for a destination by postal code
- Search for POIs in your vicinity

Search result list for POI search




Sorts the POIs in the order of distance.

POI (Points of Interests) are restaurants, hotels, petrol stations and other categories in your navigation system.

Searching for your destination by address

1 Press the **MENU** button and then touch "Address Search".

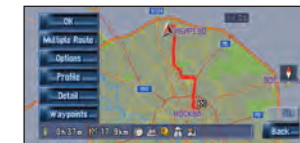

2 Input the street name.



3 Select the street name from the list.

After some steps for narrowing down your destination, the house number input screen will appear.


4 Input the house number and touch "OK".



If you want to get another recommended route by "Multiple route" and choose the best one.

5 Touch "OK" to decide your route, and then the navigation starts.


6 Begin driving in accordance with navigation guidance.

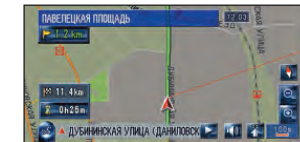

This navigation systems gives you route guidance both visually and by voice.

The route calculation is carried out and the route confirmation screen appears.

Basic operation on the map screen

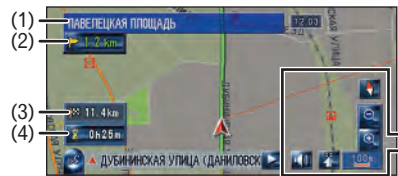

Mute the navigation voice

Touch .

Short-cut menu

Touch .

Zoom in or zoom out

Touch or .

Scrolling the map

Touch where you would like to scroll to on the map screen.

- (1) Next street
- (2) Distance to the next guidance point
- (3) Distance to your destination
- (4) Estimated time of arrival (in default)

Setting the guidance and phone volume

Press or touch in the following order.

button → **Settings** tab → **Volume**



[Phone Ringtone] and [Phone Voice] are effective for hands-free phoning.

Changing the AV source

1 Touch the source icon.




2 Touch the desired AV source.



- (1) The AV source for the rear display switches in the following order.
“MIRROR” (Same as front) – **“DVD”** (DVD drive) – **“AV”** (AV input)

Operation of the music library


First, play the CD you want to record. The CD will automatically be recorded into the built-in hard disk drive (in default setting). The recording is performed four times faster than playing the CD. After the recording is complete, you can play the music from the music library.

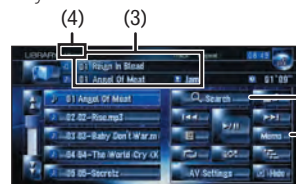

- (1) Search for a song by album, artist, genre or your favourite playlist.
- (2) Touch and hold to memorise that song in the “My Mix” playlist.
- (3) Information about the current song
- (4) “Group” playing now.

Operation of your Apple iPod®

You can control your iPod with Dock connector via the touch screen when it is connected to this navigation system via the Pioneer iPod adapter (sold separately).

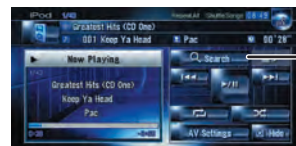

Touch to display the search categories.

Hands-free phoning

If you use the mobile phone featuring Bluetooth® wireless technology and the Bluetooth unit (sold separately), you can perform hands-free phoning.

Registering your phone

1 Turn on the Bluetooth function on your mobile phone.

2 Press and hold the button to display the Phone menu.


3 Touch the keys in the following order. **Phone settings** → **Registration** → **Navi**

4 Touch the device name of your phone.

5 Enter the password (“1111” on default) on your mobile phone.

“Registration successful” will appear on the screen when the connection has completed.


When you receive an incoming call...

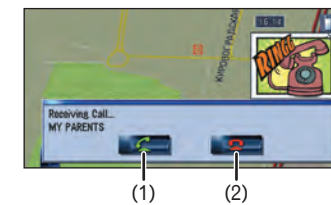

- (1)
- (2)

Making a phone call

Press and hold the button to display the “Phone menu”.

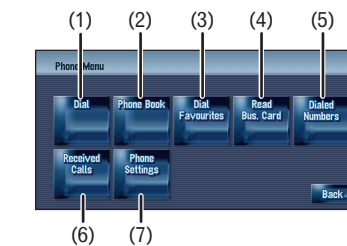

- (1) Input the number directly
- (2), (3), (5), (6) Select a contact on the list.
- (4) Transfer the phone book entries from your phone.
- (7) Modify the phone preferences.