

Pioneer *sound.vision.soul*



Hardware Manual

ENGLISH

DVD AV NAVIGATION HEAD-UNIT

AVIC-X1R

Introduction

Manual Overview

This manual mainly describes hardware-related information such as the part names of the Navigation System or precautions for use. Please read this manual and all other enclosed manuals before using your Navigation System. The following issues are described in each chapter:

How to use this manual

Introduction

This chapter describes precautions for the use of the Navigation System.

How to Use Navigation Unit and Names of the Parts

This chapter describes matters that are important to know before using the Navigation System, such as the names of each part, inserting/ejecting discs.

Appendix

This section describes how to handle the Navigation System or discs and the specifications of the Navigation System.

Terminology

Before moving on, take a few minutes to read the following information about the conventions used in this manual. Familiarity with these conventions will help you greatly as you learn how to use your new equipment.

- Buttons on your Navigation System are referred to as:
e.g.) **POS** button, **NAVI MENU** button.
- Items in various menus or touch keys displayed on the screen are referred to like this:
e.g.) "**Destination**", "**Settings**".
- Extra information, alternative use and other notes are presented like this:
e.g.)
 - ☐ When the source icon is not displayed, you can display it by touching the screen.
- The references are indicated like this:
e.g.)
 - ↪ For suitable discs → Page 6

Table of Contents

Introduction 1

- Manual Overview 1
 - How to use this manual 1
 - Terminology 1
- Table of Contents 2
- Important Safety Information 3
- Notes Before Using the System and Additional Safety Information 4
 - Precaution 4
 - Update DVD 5
 - Playable discs 6
 - DVD-Video disc region numbers 6
 - Features (Characteristics of this hardware) 6
- To protect the LCD screen 7
- For viewing LCD comfortably 7
- Condition memory 7
- What the marks on DVDs indicate 8
 - When an operation is prohibited 8
- Resetting the microprocessor 8

Chapter 1

How to Use Navigation Unit and Names of the Parts 9

- Display unit 9
- Turning the unit on and selecting a source 11
- Loading a disc 11
- Adjusting the volume 12
- Turning the source off 12
- Using the REAR button 12
- Opening and closing the LCD panel 12
 - Adjusting the LCD panel angle 12
 - Turning the LCD panel horizontal 13
- Changing the wide screen mode 13
- Operating the picture adjustment 13
 - Adjusting the dimmer 14
- Protecting your unit from theft 15
 - Removing the front panel 15
 - Attaching the front panel 15

Appendix 17

- Troubleshooting 17
- Error messages 18
- Vehicles that Cannot Obtain Speed Pulse Data 18
- Conditions Likely to Cause Noticeable Positioning Errors 18
- Handling and Care of the Disc 18
 - Navigation map discs 18
 - DVD drive and care 18
 - DVD discs and other DVD media types 19
 - CD-R/CD-RW discs 19
 - MP3 files 19
 - Ambient conditions for playing disc 21
- Using the display correctly 21
 - Handling the display unit 21
 - Liquid crystal display (LCD) screen 21
 - Keeping the LCD screen in good condition 22
 - Small fluorescent tube 22
- Glossary 22
- Specifications 23

Important Safety Information

Before using your Navigation System, be sure to read and fully understand the following safety information:

- Read the entire manual before operating this Navigation System.
- The navigation features of this unit (and rear view camera option if purchased) is intended solely as an aid to you in the operation of your vehicle. It is not a substitute for your attentiveness, judgement, and care when driving.
- Do not operate this Navigation System (or the rear view camera option if purchased) if doing so in any way will divert your attention from the safe operation of your vehicle. Always observe safe driving rules and follow all existing traffic regulations. If you experience difficulty in operating the system or reading the display, park your vehicle in a safe location and apply the parking brake before making necessary adjustments.
- Never allow others to use the system unless they have read and understood the operating instructions.
- Never use this Navigation System to route to hospitals, police stations, or similar facilities in an emergency. Please call the appropriate emergency number.
- Route and guidance information displayed by this equipment is for reference purposes only. It may not accurately reflect the latest permissible routes, road conditions, one way streets, road closures, or traffic restrictions.
- Traffic restrictions and advisories currently in force should always take precedence over guidance given by this product. Always obey current traffic restrictions, even if this product provides contrary advice.
- Failure to input correct information about the local time may result in the product providing improper routing and guidance instructions.
- Never set the volume of your Navigation System so high that you cannot hear outside traffic and emergency vehicles.
- To promote safety, certain functions are disabled unless the handbrake is applied.
- The data encoded in the disc for this product is the intellectual property of the provider, and the provider is responsible for such content.
- Keep this manual handy as a reference for operating procedures and safety information.
- Pay close attention to all warnings in this manual and follow the instructions carefully.
- Do not install the display where it may (i) obstruct the driver's vision, (ii) impair the performance of any of the vehicle's operating systems or safety features, including air bags, hazard lamp buttons or (iii) impair the driver's ability to safely operate the vehicle.
- Please remember to wear your seat belt at all times while operating your vehicle. If you are ever in an accident, your injuries can be considerably more severe if your seat belt is not properly buckled.
- Using the most current map DVDs will allow for most accurate destination mapping. Update DVDs are available through your local Pioneer dealer.
- Never use headphones while driving.

WARNING

- Do not attempt to install or service your navigation system by yourself. Installation or servicing of the navigation system by persons without training and experience in electronic equipment and automotive accessories may be dangerous and could expose you to the risk of electric shock or other hazards.

Notes Before Using the System and Additional Safety Information

Precaution

- The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in improper reception. The RDS function operates only in areas with FM stations broadcasting RDS signals.

CAUTION

This product contains a laser diode of higher class than 1. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product.

Refer all servicing to qualified personnel.

The following caution label appears on your unit.

Location: on the bottom of the display unit



En

On the top of the display unit.

CAUTION : VISIBLE AND INVISIBLE LASER RADIATION WHEN OPEN.
AVOID EXPOSURE TO BEAM.

VORSICHT : SICHTBARE UND UNSICHTBARE LASERSTRAHLUNG, WENN
ABDECKUNG GEÖFFNET NICHT DEM STRAHL AUSSETZEN!

ADVARSEL : SYNLIG OG USYNLIG LASERSTRÅLING VED ÅBNING
UNDGÅ UDSÆTTELSE FOR STRÅLING.

WARNING : SYNLIG OCH OSYNLIG LASERSTRÅLING NÄR DENNA
DEL ÄR ÖPPNAD BETRÄKTA EJ STRÅLEN.

VARO! : AVATTAESSA ALTIKUT NÄKYVÄ JA NÄKYMÄTTÖMÄLLE
LASERSATEIL YLLE. ÄLÄ KATSO SÄTEESEN.

VRV1699

⚠ WARNING

- **LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE HANDBRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.**

⚠ CAUTION

- **Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, this unit damage, smoke, and over-heat could result from contact with liquids.**

Display Definition

- From here on after, the screen that is attached to the body of the product will be referred to as the "Front Display". Any additional optional screen that is purchased for use in conjunction with this product will be referred to as the "Rear Display".
- The Pioneer CarStereo-Pass is for use only in Germany.
- Protect this product from moisture.
- If the battery is disconnected or discharged, the memory will be erased and must be reprogrammed.

In case of trouble

- Should this product fail to operate properly, contact your dealer or nearest authorised Pioneer Service Station.

Handbrake interlock

Certain functions offered by this Navigation System could be dangerous if used while driving. To prevent them being used while in motion, there is an interlock with your vehicle's handbrake. If you attempt to use these functions during driving, they may be inoperable. If so, stop in a safe place, apply the handbrake, then operate. See "Handbrake interlock" on "Operation Manual" for more information.

To ensure safe driving

⚠ WARNING

- **To avoid the risk of accident and the potential violation of applicable laws, this unit should never be used while the vehicle is being driven except for Navigation purposes. Also, Rear Displays should not be in a location where it is a visible distraction to the driver.**


- In some countries or states the viewing of images on a display inside a vehicle even by persons other than the driver may be illegal. Where such regulations apply, they must be obeyed and this unit's DVD or TV features should not be used.

This unit detects whether your vehicle's hand-brake is engaged or not, and prevents you from watching a DVD or TV on the front display while driving. When you attempt to watch a DVD or TV, the warning **VIDEO VIEWING IS NOT AVAILABLE WHILE DRIVING** will appear on the front display.

To watch a DVD or TV on the front display, park your vehicle in a safe place and apply the hand-brake.

See "Handbrake interlock" on "Operation Manual" for more information.

Colour difference of the map display between day and night

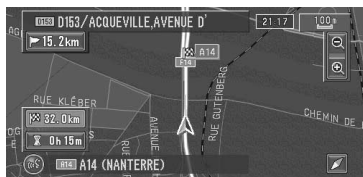

Night display

The examples in this manual are illustrated using the daytime display. When driving at night, the colours you see may differ from those shown. To use this function, the Orange/white lead to this unit must be connected correctly.

➔ Day/Night Display → Operation Manual

When using a display connected to REAR OUT

This unit's **REAR OUT** is for connection of a display to enable passengers in the rear seats to watch the DVD or TV.

- The map screen navigation images output to the rear display differ from standard NTSC format images. Therefore, their quality will be inferior to the images that appear on the front display.

⚠ WARNING

- **NEVER** install the rear display in a location that enables the driver to watch the DVD or TV while driving.

To avoid battery exhaustion

Be sure to run the vehicle engine while using this unit. Using this unit without running the engine can result in battery drainage.

⚠ WARNING

- **Do not use with vehicles that do not feature an ACC position.**

About Rear View Camera

- With an optional rear view camera (sold separately) you are able to use this product as an aid to keep an eye on trailers, or while backing up.

⚠ WARNING

- **SCREEN IMAGE MAY APPEAR REVERSED.**
- **USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.**

⚠ CAUTION

- **The rear view camera function is to use this product as an aid to keep an eye on trailers, or while backing up. Do not use this function for entertainment purposes.**
- **Please note that the edges of the rear view camera images may differ slightly according to whether full screen images are displayed when backing up, and whether the images are used for checking the rear when the vehicle is moving forward.**

Update DVD

- Updated Navigation DVDs are available for purchase from your local Pioneer dealer that includes the most current map and point of interest information. Contact your local Pioneer dealer for details.

Playable discs

About DVD-Video and CD

DVD and CD discs that display the logos shown below generally can be played back on this built-in DVD drive.

DVD-Video



CD



- ❑ **DVD** is a trademark of DVD Format/Logo Licensing Corporation.
- ❑ It is not possible to play back DVD audio discs. This DVD drive may not be able to play all discs bearing the marks shown above.

About DVD map disc

You can use discs intended for this product. Use only discs approved by Pioneer.

➤ For details on other discs → Page 18

About Dolby Digital/DTS sounds

The AVIC-X1R will down-mix Dolby Digital signals internally and the sound will be output by the stereo. (Equipped with optical output for future extension.)

- ❑ Manufactured under licence from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.



- ❑ Only digital output of DTS audio is possible. If navigation unit's optical digital outputs are not connected. DTS audio will not be output, so select an audio setting other than DTS.

DVD-Video disc region numbers

DVD-Video discs that have incompatible region numbers cannot be played on this DVD drive. The region number of the player can be found on the bottom of this unit.

The illustration below shows the regions and corresponding region numbers.



Features (Characteristics of this hardware)

Touch panel key operation

It is possible to operate this unit by using touch panel keys.

Built-in Navigation system

You can use DVD map discs that are compatible with this system.

Memory navigation

This navigation system can memorise a certain amount of information up to the set destination. This navigation system continues to operate even when you remove the map disc, allowing you to play a CD or DVD while using the navigation. (If the destination is particularly distant, you may need to insert the map disc again.)

DVD-Video playback

It is possible to play back DVD-Video, DVD-R (video mode) and DVD-RW (video mode). Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law.

➤ "Handling and Care of the Disc" → Page 18

➤ "Playable discs" → Page 6

CD playback

Music CD/CD-R/CD-RW playback is possible.

➤ "Handling and Care of the Disc" → Page 18

➤ "Playable discs" → Page 6

MP3 file playback

It is possible to play back MP3 files recorded on CD-ROM/CD-R/CD-RW (ISO9660 Level 1/Level 2 standard recordings).

- Supply of this product only conveys a licence for private, non-commercial use and does not convey a licence nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent licence for such use is required. For details, please visit <http://www.mp3licensing.com>.

⇒ “Handling and Care of the Disc” → Page 18

⇒ “Playable discs” → Page 6

NTSC/PAL compatibility

This unit is NTSC/PAL system compatible. When connecting other components to this unit, be sure components are compatible with the same video system or else images will not be correctly reproduced.

Multi-aspect

Switching between wide screen, letter box and panscan display is possible.

Multi-audio, Multi-subtitle, and Multi-angle

You can switch between multiple audio systems, subtitle languages, and multiple viewing angles of a scene recorded on a DVD as desired.

- This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorised by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorised by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Rear entertainment

By setting the DVD-Video, etc. in the built-in DVD drive, you can output images and sounds (or

sound only) from the DVD drive to the rear display even when the screen of this unit is displaying navigation.

⇒ “Using the REAR button” → Page 12

Rear view camera ready

You can display what is behind the vehicle if connected to a rear view camera (sold separately).

⇒ “About Rear View Camera” → Page 5

To protect the LCD screen

- Do not allow direct sunlight to fall on the display when this unit is not being used. Extended exposure to direct sunlight can result in LCD screen malfunction due to the resulting high temperatures.
- When using a portable phone, keep the aerial of the portable phone away from the display to prevent disruption of the video by the appearance of spots, coloured stripes, etc.
- Never touch the screen with anything besides your finger when operating the Touch Panel functions. The screen can scratch easily.

For viewing LCD comfortably

Due to its construction, the view angle of the LCD screen is limited. The viewing angle (vertical and horizontal) can be increased, however, by using **BRIGHT** to adjust the black density of the video. When using for the first time, adjust the black density in accordance with the viewing angle (vertical and horizontal) to adjust for clear viewing. **DIMMER** can also be used to adjust the brightness of the LCD screen itself to suit your personal preference.

 




Condition memory

This function memorizes audio language, subtitle language, angle number and aspect ratio made during disc playback for up to 30 discs. Without any special operations, the final setting details during playback of a disc are memorised. The next time a disc is played, the previous settings are automatically applied.

- With some discs, audio language and subtitle language are automatically specified, in which case condition memory does not function.
- When the number of discs exceeds 30, settings for the latest disc replace those for the least recent disc.


What the marks on DVDs indicate

 
The marks below may be found on DVD disc labels and packages. They indicate the type of images and audio recorded on the disc, and the functions you can use.

| Mark | Meaning |
|--|---|
|  | Indicates the number of audio systems. |
|  | Indicates the number of subtitle languages. |
|  | Indicates the number of viewing angles. |
|  | Indicates the picture size (aspect ratio: screen width-to-height ratio) type. |
|  | Indicates the number of the region where playback is possible. |

If the marks other than listed are found on DVD disc labels and packages, please ask for the DVD disc supplier for their meaning.

When an operation is prohibited

When you are watching a DVD and attempt to perform an operation, sometimes it may not be performed because of the programming on the disc. When this happens, this unit indicates the icon  on the screen.

- The icon  may not appear in certain discs.

Resetting the microprocessor

CAUTION

- Pressing the **RESET** button deletes the contents of the product's memory. For details, see section "About the Data being Deleted" of the Operation Manual.


Pressing **RESET** button lets you reset the microprocessor to its initial settings without changing the condition memory.

The microprocessor must be reset under the following conditions:

- Prior to using this unit for the first time after installation.
- If the unit fails to operate properly.
- If there appear to be problems with the operation of the system.
- When changing the combination of the equipment.
- When adding/removing additional products that attach to the unit.
- When the display and the Hide-away units are re-connected.

1 Turn the ignition switch OFF.

2 Press **RESET** button with a pen tip or other pointed instrument.

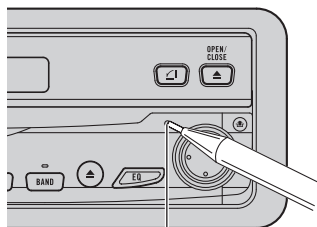


RESET button

- If you have connected other equipment (for example, a TV tuner) to this by cable, be sure to reset that equipment too.
- After completing connections or when you want to erase all memorised settings or return the unit to its initial (factory) settings except for some navigation items, switch your engine ON or set the ignition switch to ACC ON before pressing **RESET** button.
- For details, refer to "About the Data being Deleted" of the Operation Manual.

How to Use Navigation Unit and Names of the Parts

Display unit

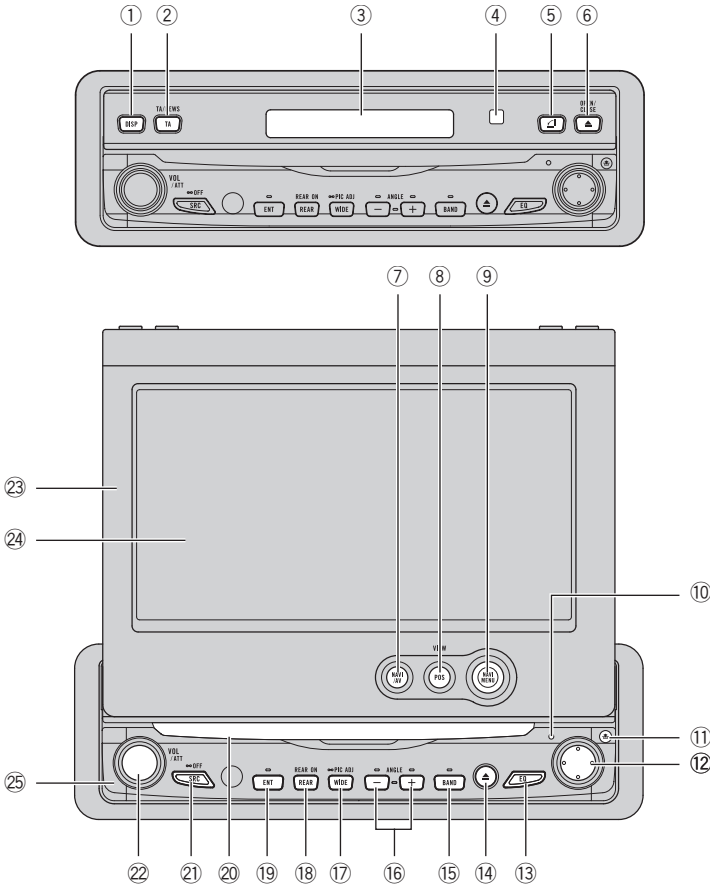

(1) DISP button

Press to select different displays.
Press this button and hold to display radio text when the source is **RADIO**.

(2) TA/NEWS button

Press to turn traffic announcements function on or off. Press and hold to turn NEWS function on or off.

(3) Sub display

Current time or the information of the audio source currently playing is displayed when the LCD panel is closed.

(4) Ambient light sensor

Senses ambient light. This system automatically adjusts the brightness of the display to compensate for ambient light.

(5) FLIP DOWN/CLOCK button

Press to turn the LCD panel horizontal temporarily when the LCD panel is upright.

Press to turn the clock of the sub display on or off when the LCD panel is closed.

(6) OPEN/CLOSE button

Press to open or close the LCD panel.

(7) NAVI/AV button

Use to switch between Navigation map displays and audio operation displays.

(8) POS button

Press to view the map or return to guidance.

Also, when the map is scrolling, pressing this button returns you to the display of the map of your surroundings.

Use to switch the view mode of the navigation when the map of your surroundings is displayed.

(9) NAVI MENU button

Press to display a menu of Navigation.

(10) RESET button

Press to return to the factory settings (initial settings). Some information items are not erased.

↳ Resetting the microprocessor → Page 8

(11) DETACH button

Press to remove the front panel from the display unit.

(12) Joystick

Move to do manual seek tuning, fast forward, reverse and track search controls, etc. Push to display **A.MENU**.

(13) EQ button

Press to select various equalizer curves.

(14) EJECT button

Press to eject a disc from this unit.

(15) BAND button**Radio:**

Press to select among three FM and MW/LW bands.

Built-in DVD drive:

When playing back a disc containing an MP3 file and audio data (CD-DA), pressing this button switches playback between the MP3 file and CD-DA. Touch and hold this button when a disc containing an MP3 file is inserted returns you to the root folder.

(16) ANGLE (+/-) button

Press to change the LCD panel angle.

(17) WIDE button

Press to select a desired mode for enlarging a 4:3 picture to a 16:9 one.

Press and hold to enter the **PICTURE ADJUST** mode.

(18) REAR button

Press to output to the REAR OUT terminal the sound and images of a disc inserted in the built-in DVD drive that is different the currently selected source.

↳ "Using the REAR button" → Page 12

(19) ENT button

Press to switch between the background displays.

(20) Disc loading slot

Insert a disc to play.

↳ "Loading a disc" → Page 11

(21) SRC (SOURCE) button

This unit is turned on by selecting a source. Press to cycle through all of the available sources. Press and hold to turn the source off.

(22) VOLUME/ATT button

Rotate to increase or decrease the volume. Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.

(23) LCD panel**(24) LCD screen****(25) Front panel**

Turning the unit on and selecting a source

CAUTION

- If the program is not installed, see “Operation Manual” and install the program.

1 Turn the ignition switch (ACC) ON.

The product's power supply comes on.



2 Press SRC button to select a source.

Press **SRC** button repeatedly to switch between the following sources:

DAB (digital audio broadcasting) — **RADIO** (tuner) — **TV** (television) — **AV** (video input) — **DISC** [CD, MP3, CD/MP3](built-in DVD drive) — **S-DVD** (DVD player/multi-DVD player) — **M-CD** (multi-CD player) — **EXT-1** (external unit 1) — **EXT-2** (external unit 2) — **AUX** (Auxiliary equipment)

- Press and hold to turn the source off.

- In the following cases, the sound source will not change to them:

- When a unit corresponding to each source is not connected to this unit.
- When no disc (DVD-Video, CD) is set in this unit.
- When no disc is set in the DVD-player (**S-DVD**).
- When no magazine is set in the multi-CD player.
- When no magazine is set in the multi-DVD player.
- When the **AUX** (auxiliary input) is set to off (refer to Operation Manual).
- When the **AV** (video input) is not set to **VIDEO** (refer to Operation Manual).

- External unit refers to a Pioneer product (such as one available in the future) that, although incompatible as a source, enables control of basic functions by this unit. Two external units can be controlled by this unit. When two external units are connected, the allocation of them to external unit 1 or external unit 2 is automatically set by this unit.
- When this unit's blue lead is connected to the vehicle's auto-aerial relay control terminal, the vehicle's aerial extends when ACC (ignition) is turned on and attach the front panel. To retract the antenna, detach the front panel. The vehicle's aerial extends regardless of turning this unit's source on or off.

Loading a disc

- **Insert a disc into the disc loading slot.**

Format reading will start.

For DVD-Video, CD

- **DISC AUTO** is off in the default setting.
- **DISC AUTO** → Operation Manual
- When a disc is already loaded in this unit, select the source by pressing **SRC** button.
- To eject a disc, press **EJECT** button.

For the map disc

- Inserting the disc starts DVD navigation mode.
- Removing the disc sets Memory navi mode.
- You can use **NAVI/AV** button to switch between navigation map displays and audio operation displays.
- The DVD drive plays one, standard, 12-cm or 8-cm (single) disc at a time. Do not use an adapter when playing 8-cm discs.
- Do not insert anything other than a disc into the disc loading slot.
- Playable discs → Page 6
- If you cannot insert a disc completely or if after you insert a disc the disc is not recognised, check that the label side of the disc is up. Press **EJECT** button to eject the disc, and check the disc for damage before inserting the disc again.

- ❑ If the DVD drive does not operate properly, an error message such as **ERROR-11** may be displayed.
- Error messages → Operation Manual

Adjusting the volume

- **Use VOLUME to adjust the audio sound level.**

With this product, rotate **VOLUME** to increase or decrease the volume.

- ❑ To adjust the navigation volume, go to the navigation menu.
- Navigation volume adjustment → Operation Manual

Turning the source off

- **Press SRC button and hold until the source turns off.**

- ❑ This product can be switched off by turning the ACC (ignition) OFF or detaching the front panel.

Using the REAR button

You can output the sound and video of the disc in the built-in DVD drive to the rear display regardless of whether DVD drive is selected as the source or not (REAR ON mode).

⚠ CAUTION

- **When you have turned the REAR ON mode on by pressing REAR button, you cannot turn it off even if you press SRC button and hold. In this case, press REAR button to turn the REAR ON mode off.**

- **Press REAR button to turn the REAR ON mode.**

The sound and video are outputted to the rear display and the illumination colour of REAR button changes to different colour.

- ❑ To turn the REAR ON mode off, press **REAR** button again.
- ❑ When a CD or CD-ROM is inserted, sound only is output to the rear display.

- Selecting the video of rear display → Operation Manual

Opening and closing the LCD panel

⚠ CAUTION

- **Do not close the LCD panel with hands by force. This may cause malfunction.**

The LCD panel will be opened or closed automatically with the turning of the ignition switch on or off. You can turn off the automatic close/open function.

- Setting the automatic close/open function → Operation Manual

- The automatic close/open function will operate the display as follows.

- When the ignition switch is turned OFF while the LCD panel is open, the LCD panel will close after six seconds.

- When the ignition switch is turned ON again (or turned to ACC), the LCD panel will open automatically.

- Removing or attaching the front panel will automatically close or open the LCD panel.

- Removing the front panel → Page 15

- When the ignition switch is turned OFF after the LCD panel has been closed, turning the ignition switch ON again (or turning it to ACC) will not open the LCD panel. In this case, press **OPEN/CLOSE** button to open the LCD panel.
- When closing the LCD panel, check to make sure that it has closed completely. If the LCD panel has stopped halfway, leaving it like this could result in damage.

- **Press OPEN/CLOSE button to open the LCD panel.**


- ❑ To close the LCD panel, press **OPEN/CLOSE** button again.

Adjusting the LCD panel angle

Important:

- If you can hear the LCD panel knocking against your vehicle's console or dashboard, press **ANGLE (-)** button to move the LCD panel a little forward.

- When adjusting the LCD panel angle, be sure to press **ANGLE (+/-)** button. Forcibly adjusting the LCD panel by hand may damage it.
- **Press ANGLE (+/-) button to adjust the LCD panel to an easily viewable angle.**
The LCD panel angle continues changing as long as you press **ANGLE (+/-)** button and hold.

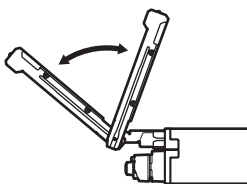

- The adjusted LCD panel angle will be memorised and the LCD panel will automatically return to this angle the next time the LCD panel is opened.

Turning the LCD panel horizontal

When the LCD panel is upright and it hinders the operation of the air conditioner, the position of the panel can be turned horizontal temporarily.

- **Press FLIP DOWN/CLOCK button to turn the LCD panel horizontal.**
 - To return to original position, press **FLIP DOWN/CLOCK** button again.
 - The LCD panel returns to the original position automatically with beep sounds 10 seconds after operation.

Changing the wide screen mode

- **Press WIDE button to select the desired setting.**
Press **WIDE** button repeatedly to switch between the following settings:
FULL (full) — **JUST** (just) — **CINEMA** (cinema) — **ZOOM** (zoom) — **NORMAL** (normal)

FULL (full)

A 4:3 picture is enlarged in the horizontal direction only, enabling you to enjoy a 4:3 TV picture (normal picture) without any omissions.

JUST (just)

The picture is enlarged slightly at the centre and the amount of enlargement increases horizontally toward the ends of the picture, enabling you to enjoy a 4:3 picture without sensing any disparity even on a wide screen.

CINEMA (cinema)

A picture is enlarged by the same proportion as **FULL** or **ZOOM** in the horizontal direction and by an intermediate proportion between **FULL** and **ZOOM** in the vertical direction; ideal for a cinema-sized picture (wide screen picture) where captions lie outside.

ZOOM (zoom)

A 4:3 picture is enlarged in the same proportion both vertically and horizontally; ideal for a cinema-sized picture (wide screen picture).

NORMAL (normal)

A 4:3 picture is displayed as it is, giving you no sense of disparity since its proportions are the same as that of the normal picture.

- Different settings can be memorised for each video source.
- When video is viewed in a wide screen mode that does not match its original aspect ratio, it may appear differently.
- Remember that use of this system for commercial or public viewing purposes may constitute an infringement on the author's rights protected by the Copyright Law.
- Video will appear grainy when viewed in **CINEMA** or **ZOOM** mode.
- The navigation map and the rear view camera picture is always **FULL**.

Operating the picture adjustment

1 Press WIDE button and hold to display PICTURE ADJUST.

BRIGHT — Adjust the black intensity

CONTRAST — Adjust the contrast

COLOR — Adjust the colour saturation

HUE — Adjust the tone of colour (red is emphasised or green is emphasised)

DIMMER — Adjust the brightness of display

BACK-CAMERA — Switch to the picture adjustment display for the rear view camera

- Touching "**SOURCE**" (or "**NAVI**") while adjusting the rear view camera image returns you to the previous screen. (Except when the vehicle's gearstick is in reverse [R].)
- The adjustments of **BRIGHT** and **CONTRAST** are stored separately for light ambient (daytime) and dark ambient (nighttime). A sun ☀ or moon 🌙 is displayed to the left of **BRIGHT** and **CONTRAST**, respectively, as the ambient light sensor determines brightness or darkness.
- You cannot adjust **HUE** for PAL video.
- You cannot adjust **COLOR** and **HUE** for the source without a video and navigation map display.
- You can adjust the picture adjustment for the rear view camera only when **CAMERA** in **SETUP** menu is turned on.
- Setting for rear view camera → Operation Manual
- The picture adjustment may not be able to be used with some rear view cameras.
- The same setting is selected for the normal background picture and the navigation map display.
- Because of the LCD screen characteristics, you may not be able to adjust the screen at low temperatures.

2 Touch "+" or "-" to adjust the selected item.

Each time you touch "+" or "-" increases or decreases the level of selected item. **+24** — **-24** is displayed as the level is increased or decreased.

3 Touch "ESC" to hide the touch panel keys.

Adjusting the dimmer

The **DIMMER** adjustments for daytime, evening, and nighttime ambient light are stored separately. The brightness of the LCD screen adjusts automatically to the optimum level in accordance with the ambient light based on the set values.

1 Press WIDE button and hold to display PICTURE ADJUST.

- The ambient light level icon used as the standard for adjusting **DIMMER** appears above the level bar.
- The icons indicating the current ambient brightness used for adjusting **BRIGHT** and **CONTRAST** may differ from **DIMMER** slightly.
 - Yellow sun ☀ — bright ambient light (daytime)
 - Red sun 🌅 — intermediate brightness (evening)
 - Blue moon 🌙 — dark ambient light (nighttime)

2 Touch ◀ or ▶ to adjust the brightness.

The level indicates the brightness of the screen being adjusted. The further the level indicator moves to the right, the brighter the screen.

3 Touch "ESC" to hide the touch panel keys.

- Because of the LCD screen characteristics, you may not be able to adjust the screen at low temperatures.

Protecting your unit from theft

The front panel can be detached from the display unit to discourage theft, as described below.

Important:


- Never use force or grip the display and the buttons tightly when removing or attaching.
- Avoid subjecting the front panel to excessive shocks.
- Keep the front panel out of direct sunlight and high temperatures.
- After detached the front panel, keep it in the safe place not to result in scratching or damage.

Removing the front panel

1 Press DETACH button to remove the front panel.

2 Gently grip the right side of the front panel and slowly pull it outward.

Take care not to drop the front panel and protect it from contact with water or other fluids to prevent permanent damage.

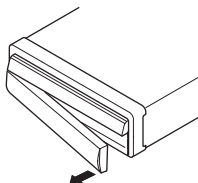



Attaching the front panel

- **Replace the front panel by holding it upright to this unit and clipping it securely into the mounting hooks.**

Appendix

Troubleshooting

- ↪ About troubleshooting other than description below → Appendix of the Operation Manual

| Symptom | Cause | Action (See) |
|---|--|--|
| There's no picture. | The handbrake cord is not connected. | Connect a handbrake cord, and apply the handbrake. |
| | The handbrake is not applied. | Connect a handbrake cord, and apply the handbrake. |
| The icon  is displayed, and operation is not possible. | The operation is prohibited for the disc. | This operation is not possible. |
| | The operation is not compatible with the disc's organization. | This operation is not possible. |
| The picture stops (pauses) and the unit cannot be operated. | Reading of data has become impossible during playback. | After pressing  once, start playback once more. |
| The picture is stretched, the aspect is incorrect. | The aspect setting is incorrect for the display. | Select the appropriate setting for your display. (Page 13) |
| Rear display picture disappears. | <ul style="list-style-type: none"> The source disc being listened to with the product has been ejected. The disc without a video source is play-backed. The REAR button was pressed and REAR ON mode switched off. There was a problem with the rear display or a faulty wiring connection, for example. Rear View is selected on the screen. When the gearstick is in [R], displays rear view camera images. (When "NAVI" is selected in REAR DISP menu.) | <ul style="list-style-type: none"> Before ejecting the disc, switch the source. Switch the source with a video source. Press the REAR button to turn REAR ON mode on. Check the rear display and its connection. Select view mode other than Rear View. Select SOURCE in REAR DISP menu. (or when you move the shift lever other than [R] position, the screen will be returned to the previous display.) |
| Nothing is displayed and the touch panel keys cannot use. | <p>The setting for the rear view camera is incorrect.</p> <p>The gearstick was placed in [R] when the rear view camera was not connected.</p> | <p>Connect a rear view camera correctly. Press NAVI/AV button to return to the source display and then select the correct setting for CAMERA.</p> <p>↪ About CAMERA setting → Operation Manual</p> |
| LCD Panel knocking against your vehicle's console or dashboard. | Incorrect setting of angle. | Press ANGLE (+/-) to adjust the LCD angle. Forcibly adjusting the LCD panel by hand may damage it. |
| Video image appears grainy. | This happens when videos are viewed in CINEMA or ZOOM mode. | Select a different mode to view videos. |

Error messages

- About error messages → Appendix of the Operation Manual

Vehicles that Cannot Obtain Speed Pulse Data

The speed pulse data comes from the speed sensing circuit. The location of this speed sensing circuit depends on your vehicle model. In some cases, it is impossible to make a connection to it, and in such a case we recommend that the ND-PG1 speed pulse generator (sold separately) be used.

⚠ CAUTION

- **Be sure to connect the speed pulse lead. If not, vehicle location error will increase.**

Conditions Likely to Cause Noticeable Positioning Errors

For various reasons such as the state of the road you are travelling on and the state of reception of the GPS signal, the actual position of your vehicle may differ from the position displayed on the map screen.

Some types of vehicle may not output a speed signal while driving at just a few kilometres per hour. In such a case, the current location of your vehicle may not be displayed correctly while in a traffic jam or in a car park.

- The current vehicle position cannot be displayed exactly under all conditions, due to variations in satellite reception, road conditions, the vehicle's condition, and any objects in contact with the aerial.
- Also, GPS reception may be unavailable during certain weather conditions, when driving in tunnels or garages, or when signal interference may occur such as when driving between tall buildings or near large vehicles.

Handling and Care of the Disc

Some basic precautions are necessary when handling your discs.

Navigation map discs

- Do not use discs other than those intended for this product. Use only discs approved by Pioneer.
 - For suitable discs → Page 6
 - ☐ If you wish to use other navigation discs, first check that they are compatible with this equipment and approved by Pioneer.

DVD drive and care

- Use only normal, round discs. If you insert irregular, non-round, shaped discs they may jam in the DVD drive or not play properly.



- Check all discs for cracks, scratches or warping before playing. Discs that have cracks, scratches or are warped may not play properly. Do not use such discs.
- Avoid touching the recorded (non-printed) surface when handling the disc.
- Store discs in their cases when not in use.
- Keep discs out of direct sunlight and do not expose the discs to high temperatures.
- Do not attach labels, write on or apply chemicals to the surface of the discs.
- To clean dirt from a disc, wipe the disc with a soft cloth outward from the centre of the disc.



- If the heater is used in cold weather, condensation may form on components inside the DVD drive. Condensation may cause the DVD drive to not operate properly. If you think that condensation is a problem turn off the DVD drive for an hour or so to allow the DVD drive to dry out and wipe any damp discs with a soft cloth to remove the moisture.
- Road shocks may interrupt disc playback.

DVD discs and other DVD media types

- With some DVD-Video discs, it may not be possible to use certain functions.
- It may not be possible to play back some DVD video discs.
- When DVD-R/DVD-RW discs are used, playback is possible only for discs which have been finalized.
- When DVD-R/DVD-RW discs are used, playback is possible only for discs which have been recorded with the Video format (video mode). It is not possible to play back DVD-RW discs which have been recorded with the Video Recording format (VR mode).
- It may not be possible to play back DVD-R/DVD-RW discs which have been recorded with the Video format (video mode), because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of this unit.
- It is not possible to play back DVD-ROM discs other than Pioneer DVD map disc or DVD-RAM discs.
- Playback of discs recorded on a personal computer may not be possible depending on the application settings and the environment. Please record with the correct format. (For details, contact the manufacturer of the application.)

CD-R/CD-RW discs

- When CD-R/CD-RW discs are used, playback is possible only for discs which have been finalized.
- It may not be possible to playback CD-R/CD-RW discs recorded on a music CD recorder or a personal computer because of disc characteristics, scratches or dirt on the disc, or dirt, condensation, etc. on the lens of this unit.
- Playback of discs recorded on a personal computer may not be possible depending on the application settings and the environment. Please record with the correct format. (For details, contact the manufacturer of the application.)
- Playback of CD-R/CD-RW discs may become impossible in case of direct exposure to sunlight, high temperatures, or the storage conditions in the vehicle.

- Titles and other text information recorded on a CD-R/CD-RW disc may not be displayed by this unit (in the case of audio data (CD-DA)).
- If you insert a CD-RW disc into this unit, time to playback will be longer than when you insert a conventional CD or CD-R disc.
- Read the precautions with CD-R/CD-RW discs before using them.

MP3 files

- MP3 is short for MPEG Audio Layer 3 and refers to an audio compression technology standard.
- This unit allows playback of MP3 files on CD-ROM, CD-R and CD-RW discs. Disc recordings compatible with level 1 and level 2 of ISO9660 and with the Romeo and joliet file system can be played back.
- It is possible to play back multi-session compatible recorded discs.
- MP3 files are not compatible with packet write data transfer.
- The max. number of characters which can be displayed for a file name, including the extension (.mp3), is 30 characters from the first character.
- The max. number of characters which can be displayed for a folder name is 30 characters.
- In case of files recorded according to the Romeo and Joliet file system, only the first 30 characters can be displayed. Depending on the width of the characters, the screen may not be able to display 30 characters.
- When playing discs with MP3 files and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs, both types can be played only by switching mode between MP3 and CD-DA.
- The folder selection sequence for playback and other operations becomes the writing sequence used by the writing software. For this reason, the expected sequence at the time of playback may not coincide with the actual playback sequence. However, there also is some writing software which permits setting of the playback order.
- Some audio CDs contain tracks that merge into one another without a pause. When these discs are converted to MP3 files and burned to a CD-R/CD-RW/CD-ROM, the files will be played back on this player with a short pause between each one, regardless of the length of the pause between tracks on the original audio CD.


- Files are compatible with the ID3 Tag Ver. 1.0 and Ver. 1.1 formats for display of album (disc title), track (track title) and artist (track artist).
- Only when MP3 files of 32, 44.1 and 48 kHz frequencies are played back, the emphasis function is valid. (16, 22.05, 24, 32, 44.1, 48 kHz sampling frequencies can be played back.)
- There is no m3u playlist compatibility.
- There is no compatibility with the MP3i (MP3 interactive) or mp3 PRO format.
- The sound quality of MP3 files generally becomes better with increasing bit rate. This unit can play recordings with bit rates from 8 kbps to 320 kbps, but in order to be able to enjoy a certain sound quality, it is recommended to use only discs recorded with a bit rate of at least 128 kbps.

Important:

- When naming an MP3 file, add the corresponding filename extension (.mp3).
- This unit plays back files with the filename extension (.mp3) as MP3 files. To prevent noise and malfunctions, do not use this extension for files other than MP3 files.

About folders and MP3 files

- An outline of a CD-ROM with MP3 files on it is shown below. Subfolders are shown as folders in the folder currently selected.

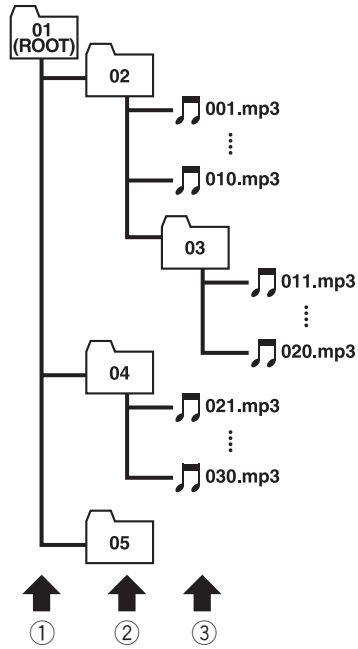

① First level

② Second level

③ Third level

Notes:

- This unit assigns folder numbers. The user can not assign folder numbers.
- If you are using a folder that does not contain an MP3 file, the folder itself will display but you will not be able to see any files in the folder.
- MP3 files in up to 8 tiers of folders can be played back. However, there is a delay in the start of playback on discs with numerous tiers. For this reason we recommend creating discs with no more than 2 tiers.
- It is possible to play back up to 253 items from a folder on a single disc.

Ambient conditions for playing disc

- At extremely high temperatures, a temperature cutout protects this product by switching it off automatically.
- Despite our careful design of the product, as a result of mechanical wear, ambient conditions for use, or handling of the disc, small scratches that do not affect actual operation may appear on the disc surface. This is not a sign of the malfunction of this product. Consider it to be normal wear and tear.

Using the display correctly

WARNING

- **If liquid or foreign matter should get inside this product, turn off the power immediately and consult your dealer or the nearest authorised PIONEER Service Station. Do not use the product in this condition because doing so may result in a fire, electric shock, or other failure.**
- **If you notice smoke, a strange noise or smell from the display unit, or any other abnormal signs on the LCD screen or Sub display, turn off the power immediately and consult your dealer or the nearest authorised PIONEER Service Station. Using this product in this condition may result in permanent damage to the system.**
- **Do not disassemble or modify this product, as there are high-voltage components inside which may cause an electric shock. Be sure to consult your dealer or the nearest authorised PIONEER Service Station for internal inspection, adjustments or repairs.**

Handling the display unit

- When the LCD panel is subjected to direct sunlight for a long period of time, it will become very hot resulting in possible damage to the LCD screen. When not using this unit, close the LCD panel and avoid exposing it to direct sunlight as much as possible.
- The display unit should be used within the temperature ranges shown below.

- Operating temperature range: -10 to +50 °C
- Storage temperature range: -20 to +80 °C
- Do not use the display unit at temperatures higher or lower than the operating temperature range because the display unit may not operate normally and the display unit can be damaged.
- The LCD screen is exposed in order to increase its visibility within the vehicle. Please do not press strongly on it as this may damage it.
- Do not place anything on the LCD panel when it is deployed. Also, do not attempt to carry out angle adjustment, or open/close the LCD panel by hand. Applying strong force to the LCD panel may damage it.
- Do not push the LCD screen with much force as this may scratch it.
- Never touch the LCD screen with anything besides your finger when operating the Touch Panel functions. The LCD screen can scratch easily.
- Be careful not to place anything between the LCD panel and the main body when the LCD panel is opening or closing. If an object gets between the LCD panel and main body, the LCD panel may stop working.

CAUTION

- **Be careful of fingers, long hair, and loose articles of clothing which could possibly get caught between the LCD panel and the main body and cause serious injury.**

Liquid crystal display (LCD) screen

- If the LCD panel is near the vent of an air conditioner when it is opened, make sure that air from the air conditioner is not blowing on it. Heat from the heater may break the LCD screen, and cool air from the cooler may cause moisture to form inside the display unit resulting in possible damage. Also, if the LCD panel is cooled down by the cooler, the LCD screen may become dark, or the life span of the small fluorescent tube used inside the LCD panel may be shortened.
- Small black dots or white dots (bright dots) may appear on the LCD screen. These are due to the characteristics of the LCD screen and do not indicate a problem with the display unit.

- At low temperatures, the LCD screen may be dark for a while after the power is turned on.
- The LCD screen will be difficult to see if it is exposed to direct sunlight.
- When using a portable phone, keep the aerial of the portable phone away from the display unit to prevent disruption of the video by the appearance of spots, coloured stripes, etc.

Keeping the LCD screen in good condition

- When removing dust from the LCD screen or cleaning the LCD screen, first turn the system power off, then wipe with the **supplied cloth**.
- When wiping the LCD screen, take care not to scratch the surface. Do not use harsh or abrasive chemical cleaners.

Small fluorescent tube

- A small fluorescent tube is used inside the display to illuminate the LCD screen.
 - The fluorescent tube should last for approximately 10,000 hours, depending on operating conditions. (Using the display unit at low temperatures reduces the service life of the fluorescent tube.)
 - When the fluorescent tube reaches the end of its useful life, the LCD screen will be dark and the image will no longer be projected. If this happens, consult your dealer or the nearest authorised PIONEER Service Station.

Glossary

➤ Glossary → Appendix of the Operation Manual

Specifications

General

Rated power source 14.4 V DC
(allowable voltage range:
12.0 – 14.4 V DC)

Earthing system..... Negative type

Max. current consumption
..... 10.0 A

Display unit:

Dimensions (W × H × D):

DIN

Chassis..... 178 × 50 × 160 mm

Nose..... 188 × 58 × 34 mm

D

Chassis..... 178 × 50 × 165 mm

Nose..... 170 × 46 × 29 mm

Weight 2.5 kg

Hideaway unit:

Dimensions (W × H × D)

..... 180 × 30 × 140 mm

Weight 0.7 kg

Navigation

GPS Receiver:

System L1, C/Acode GPS

SPS (Standard Positioning Service)

Reception system 8-channel multi-channel
reception system

Reception frequency... 1,575.42 MHz

Sensitivity -130 dbm

Position update frequency

..... Approx. once per second

GPS aerial:

Aerial Micro strip flat aerial/right-
handed helical polarization

Aerial cable 5.0 m

Dimensions (W × H × D)

..... 33 × 13 × 36 mm

Weight 105 g

Display

Screen size/aspect ratio 6.5 inch wide/16:9
(effective display area: 144 ×
76 mm)

Pixels 336,960 (1,440 × 234)

Type..... TFT active matrix, transmis-
sive type

Colour system..... NTSC/PAL compatible

Operating temperature range

..... -10 – +50 °C

Storage temperature range

..... -20 – +80 °C

Angle adjustment..... 50 – 110°

(initial settings: 110°)

Audio

Maximum power output 50 W × 4
50 W × 2 ch/4 Ω + 70 W × 1
ch/2 Ω (for subwoofer)

Continuous power output.....27 W × 4 (DIN 45324,
+B=14.4 V)

Load impedance.....4 Ω (4 – 8 Ω [2 Ω for 1 ch]
allowable)

Preout max output level/output impedance

.....2.0 V/100 ohm

Equalizer (3-Band Parametric Equalizer):

Low

Frequency40/80/100/160 Hz

Q Factor.....0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ±12dB

Mid

Frequency200/500/1k/2k Hz

Q Factor.....0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ±12dB

High

Frequency3.15k/8k/10k/12.5k Hz

Q Factor.....0.35/0.59/0.95/1.15 (+6 dB
when boosted)

Gain ±12dB

Loudness contour

Low+3.5 dB (100 Hz), +3 dB (10
kHz)

Mid.....+10 dB (100 Hz), +6.5 dB
(10 kHz)

High.....+11 dB (100 Hz), +11 dB
(10 kHz)
(volume: -30 dB)

Tone controls:

Bass

Frequency40/63/100/160 Hz

Gain ±12dB

Treble

Frequency2.5k/4k/6.3k/10k Hz

Gain ±12dB

HPF:

Frequency50/80/125 Hz

Slope.....-12 dB/oct

Subwoofer:

Frequency50/80/125 Hz

Slope.....-18 dB/oct

Gain ±12dB

PhaseNormal/Reverse

DVD Drive

System.....DVD-Video, Compact disc
audio, MP3 system

Usable discsDVD-Video, Compact disc,
MP3

Region number.....2

Signal format:

Sampling frequency.....44.1/48/96 kHz

Number of quantization bits

.....16/20/24; linear

Frequency response.....5 – 44,000 Hz (with DVD, at
sampling frequency 96 kHz)

Signal-to-noise ratio.....97 dB (1 kHz) (IEC-A net-
work)

| | |
|---------------------------|-------------------------------------|
| | (CD: 96 dB (1 kHz) (IEC-A network)) |
| Dynamic range | 95 dB (1 kHz) |
| | (CD: 94 dB (1 kHz)) |
| Distortion..... | 0.008 % (1 kHz) |
| Output level: | |
| Video | 1.0 V _{p-p} /75 Ω (±0.2 V) |
| Audio..... | 1.0 V (1 kHz, 0 dB) |
| Number of channels..... | 2 (stereo) |
| MP3 decoding format | MPEG-1 & 2 Audio Layer 3 |

FM tuner

| | |
|--------------------------------|---------------------------------------|
| Frequency range | 87.5 – 108.0 MHz |
| Usable sensitivity..... | 8 dBf (0.7 μV/75 Ω, mono, S/N: 30 dB) |
| 50 dB quieting sensitivity.... | 10 dBf (0.9 μV/75 Ω, mono) |
| Signal-to-noise ratio | 75 dB (IEC-A network) |
| Distortion..... | 0.3 % (at 65 dBf, 1 kHz, stereo) |
| | 0.1 % (at 65 dBf, 1 kHz, mono) |
| Frequency response | 30 – 15,000 Hz (±3 dB) |
| Stereo separation | 45 dB (at 65 dBf, 1 kHz) |
| Selectivity | 80 dB (±200 kHz) |

MW tuner

| | |
|-----------------------------|-------------------------|
| Frequency range | 531 – 1,602 kHz (9 kHz) |
| Usable sensitivity..... | 18 μV (S/N: 20 dB) |
| Signal-to-noise ratio | 65 dB (IEC-A network) |

LW tuner

| | |
|-----------------------------|-----------------------|
| Frequency range | 153 – 281 kHz (9 kHz) |
| Usable sensitivity..... | 30 μV (S/N: 20 dB) |
| Signal-to-noise ratio | 65 dB (IEC-A network) |

Note:

- Specifications and the design are subject to possible modifications without notice due to improvements.

PIONEER CORPORATION

4-1, MEGURO 1-CHOME, MEGURO-KU, TOKYO 153-8654, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.

TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium

TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936

TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia

TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R OP2, Canada

TEL: 1-877-283-5901

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Bldv.Manuel Avila Camacho 138 10 piso

Col.Lomas de Chapultepec, Mexico, D.F. 11000

TEL:55-9178-4270

先鋒股份有限公司

總公司: 台北市中山北路二段44號13樓

電話: (02) 2521-3588

先鋒電子(中國)有限公司

香港辦事處: 香港銅鑼灣告士打道280號世界貿易中心

17樓1704-06室

電話: (0852) 2848-6488

Published by Pioneer Corporation.

Copyright © 2004 by Pioneer Corporation.

All rights reserved.

Printed in Belgium

<CRB2029-A> EW

<KYGHX> <04L00001>