

AVIC-HD3II

Quick Start Guide

This guide is intended to guide you through the basic functions of this navigation system. For details, please refer to the operation manual and hardware manual provided with the product.

Hardware buttons



1 OPEN CLOSE button

Press to access the disc loading slot. Press and hold to set the tilt of the LCD panel.

2 V button

Press to enter PICTURE ADJUSTMENT mode.

3 VOL (▼/▲) button

You can adjust the volume of the audio source.

4 AV button

Press to switch the screen to the audio operation screen. If you press the AV button again, the audio source switches.

5 MENU button

Press to display a navigation menu. Press and hold to display "Phone Menu" when a Pioneer Bluetooth unit (sold separately) is connected.

6 MAP button

Press to view the navigation map screen or to switch between view modes.

7 TRK (◀/▶) button

Press when the built-in DVD drive source is selected to skip a track or a chapter. Press and hold to fast forward/fast reverse a track or a chapter.

8 PLIST (▼/▲) button

Switches preset channels during radio operation.

9 TA/NEWS button

Press to turn the traffic announcement function on or off. Press and hold to turn the NEWS function on or off.

Switching screens



AV screen




Navigation map

Search function overview


This navigation system has multiple methods for entering your destination.

Press the **MENU** button to display the navigation menu.

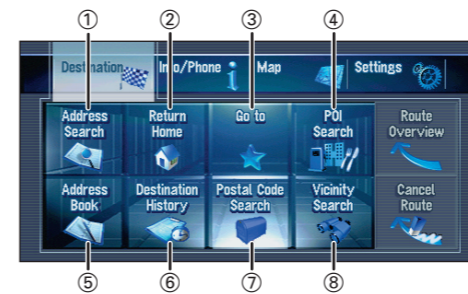

- ① Search by address
- ② Calculate a route to the home address
- ③ Calculate a route to your favourite destination
- ④ Search for POIs in the database
- ⑤ Select a registered destination from the address book
- ⑥ Select a previously routed destination
- ⑦ Search for a destination by postal code
- ⑧ Search for POIs in your vicinity

Search result list for POI search

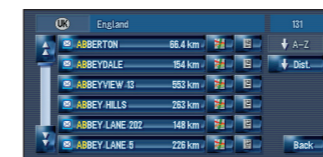


Sorts the POIs in the order of distance.

POI (Points of Interests) are restaurants, hotels, petrol stations and other categories in your navigation system.

Searching for destinations by address

1 Press the **MENU** button and then touch **Address Search**.

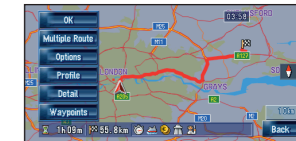

2 Touch **A** and then select a country.

3 Input the street name.



4 Select the street name from the list.

After narrowing down your destination, the house number input screen will appear.

5 Input the house number and touch **OK**.




The route calculation is carried out and the route confirmation screen appears.

You can get another route with **Multiple Route**. You may then choose your preferred route.


6 Touch **OK** to select your route. Navigation starts.

7 Begin driving in accordance with navigation guidance.

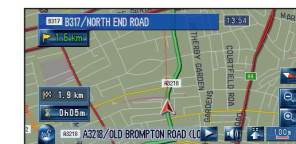

This navigation system gives you route guidance both visually and by voice.

Basic operation on the map screen

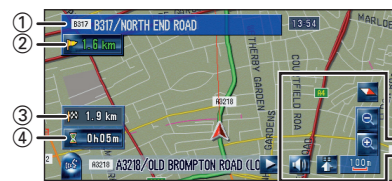

Mute the navigation voice
Touch

Short-cut Menu
Touch

Zoom in or zoom out
Touch or

Scrolling the map

Touch where you would like to scroll to on the map screen.

- ① Next street
- ② Distance to the next guidance point
- ③ Distance to your destination
- ④ Estimated time of arrival (in default)

Setting guidance and phone volume

Press or touch in the following order.

button → **Settings** tab → **Volume**



“Phone Ringtone” and “Phone Voice” are effective for hands-free phoning.

Traffic information on the map

Traffic conditions can be overlaid on the map when there is traffic information transmitted by FM radio service through the Radio Data System (RDS-TMC).



- ① **Traffic event**
 - Stationary traffic
 - Slow and queuing traffic
 - Closed/blocked roads
 - Other events (e.g., accident)

Changing the AV source

1 Touch the source icon.



2 Touch the desired AV source.



- ① The AV source for the rear display switches in the following order.
“MIRROR” (Same as front) – “DVD” (DVD drive) – “AV” (AV input)

Operation of Music Library


First, play the CD you want to record. The CD will automatically be recorded onto the built-in hard disk drive (in the default setting). The recording is performed four times faster than playing the CD. After the recording is complete, you can play the music from your music library.



- ① Search for songs by album, artist, genre or your favourite playlist.
- ② Touch and hold this key to memorise that song in the “My Mix” playlist.
- ③ Information about the current song
- ④ “Group” playing now

Operation of your Apple iPod®

You can control your iPod with Dock connector via the touch screen when your iPod is connected to this navigation system via a Pioneer INTERFACE ADAPTER for iPod (sold separately).

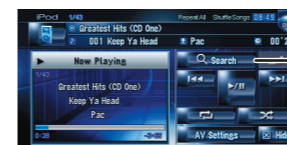

Touch to display the search categories.

Hands-free phoning

If you use a mobile phone featuring Bluetooth® wireless technology and the Bluetooth unit (sold separately), you can perform hands-free phoning.

Registering your phone

- 1 Turn on the Bluetooth function on your mobile phone.
- 2 Press and hold the button to display “Phone menu”.
- 3 Touch the keys in the following order.
Phone settings
→ **Registration** → **Navi**
- 4 Touch the device name for your phone.
- 5 Enter the password (default: “1111”) on your mobile phone.

“Registration successful” will appear on the screen when the connection is complete.


When you receive an incoming call...



- ① Accept the call
- ② Reject the call

Making a phone call

Press and hold the button to display “Phone menu”.

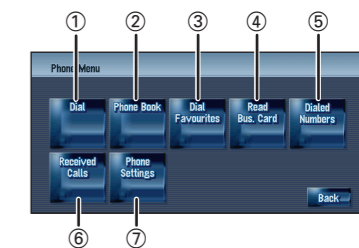

- ① Input the number directly.
- ②, ③, ⑤, ⑥ Select a contact from the list.
- ④ Transfer phone book entries from your phone.
- ⑦ Modify your phone preferences.