

# CORRECTIONS

The DVD-V7300D Operating Instructions contained the following errors on page 48, 57 and 82. Replace them with the following corrections.

## Page 48

### 13 SYNC OUT (DURING SQ)


This function sets whether or not a video synchronization signal is output to a black screen or to a blue background when the player is not outputting video.

**OFF:** Video is always output (the synchronization signal remains).

**ON:** Video is not output at times other than during playback and during menu screen display.

## Page 57

1-2

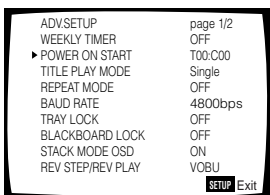

## DVD Video CD CD


### Setting the power on start function

1. Move the ► (pointer) to "POWER ON START" by pressing ▲ or ▼.
2. Set it to ON by pressing ◀ or ▶.
  - When the power is turned on, "T00:C00" (the initial value) is displayed. Once the settings are made following the procedure described below, those settings are displayed when the power is turned on next.
3. Press <sup>ENTER</sup> .
  - The POWER ON START setting screen is displayed.

## Page 82

### Synchronized use of 2 or more players

- Using a single sync generator to synchronize two or more players
- Make sure that the terminator switch is ON on the terminal player and OFF on the other players.
- When applying synchronization to one player, set the terminator switch to ON.

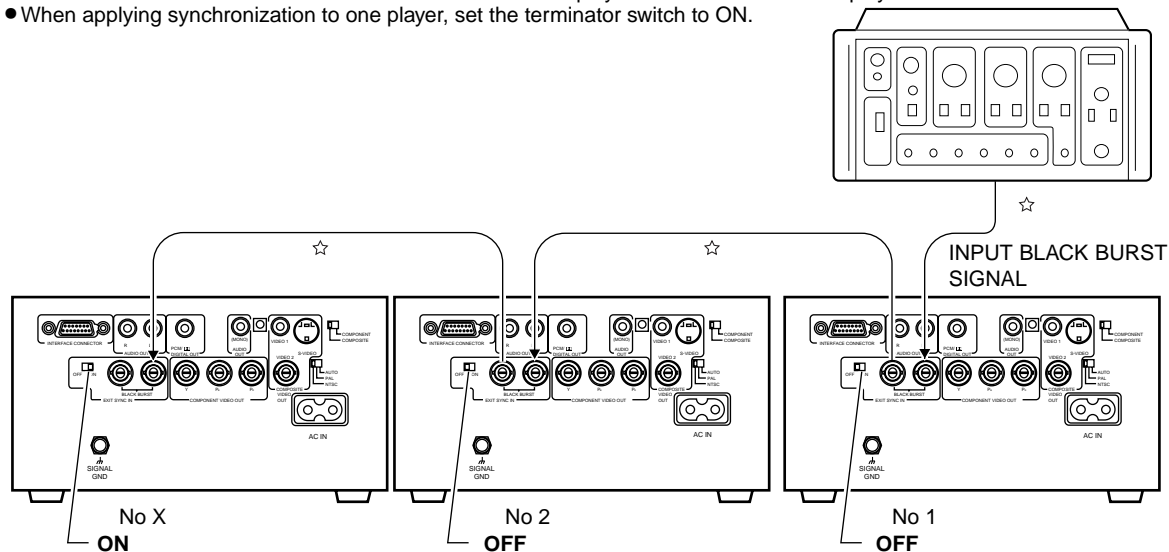

☆ Cables can be found at your local audio/video dealer.